
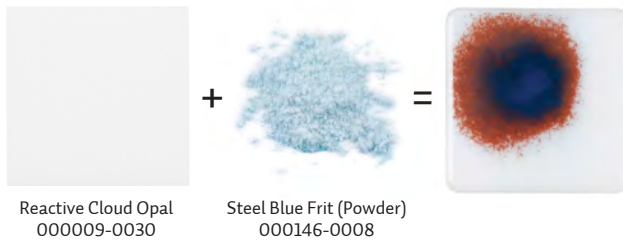


⊕ Get a Reaction


Try fusing samples of Reactive Cloud Opal and Reactive Ice Clear with our copper-bearing glasses or copper leaf or silver foil. Their chemistries may react at the interface, resulting in special colors and effects. Reactions range from subtle to dramatic and can prove quite versatile in art and design.

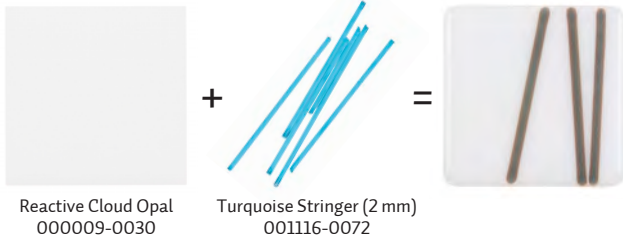

Layups: 6mm stacks (3 mm clear base + 3 mm reactive sheet), -0003 frit, 2 mm stringer, -0008 powder, Silver Foil
Process temp: 1490°F (810°C)

Want a quick way to identify Bullseye's copper-bearing and other reactive glass styles? Download a free copy of our *Reactive Potential of Bullseye Glass* chart at bullseyeglass.com.

To learn more about glass reactions, see our online video lessons or download *Make It: Linear Reaction* instructions at bullseyeglass.com.

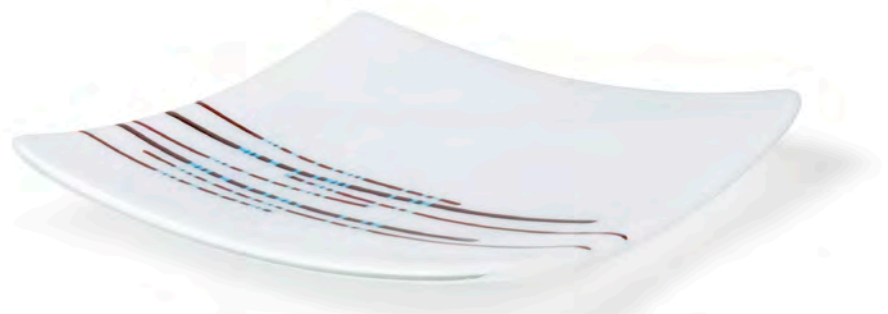

⊕ Reactions with Sulfur



Fusing our sulfur- or copper-bearing sheet glass, powder, and frit with other reactive elements results in a range of colors and effects that can prove quite versatile in art and design.

Layups: 6mm stacks (3mm clear base* + 3mm sulfur or copper-bearing sheet glass), frit, 1mm stringer, silver foil.



000137-008 + 000116-0030
French Vanilla Frit (Powder) fired on Turquoise Opal

Sulfur + Copper

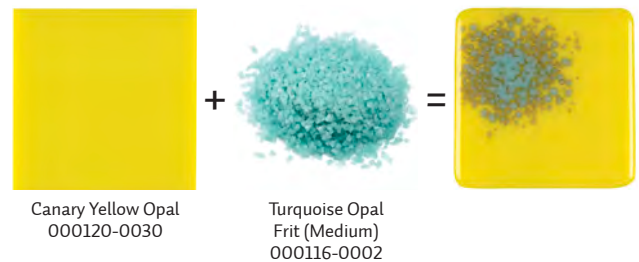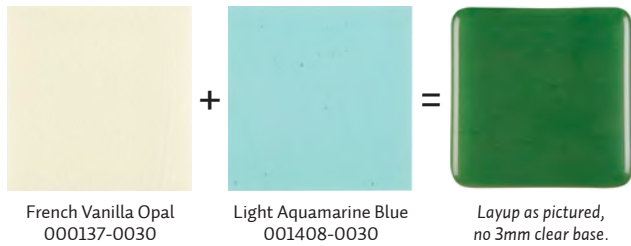

Sulfur + Lead



Sulfur + Silver



* Except where noted.

**See also instructions for River Rock Reaction part sheets at bullseyeglass.com.